




www.TradeShowJoe.com
info@tradeshowjoe.com

(866) 821-1520
Toll-Free Phone

Make your monitor POP !

- Integrate a flat panel monitor into a POP-UP display.
- Easy and simple set-up in just minutes.
- Monitor stand rests behind a MagnaPOP or Spider POP-UP display.
- Monitor position is adjustable.
- Flat panel monitor is mounted to a POP Structure stand with a heavy duty 12" or 15" diameter steel base plate.

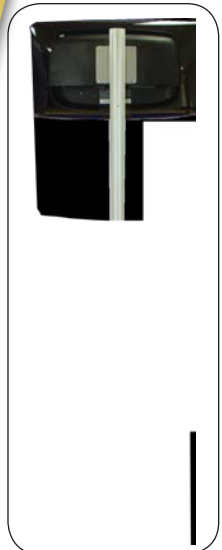

InstaMount Stand is sold separately from pop-up




Back View



Universal Monitor Support Bracket

InstaMount Stand Packs Together with your POP-UP Display in a Single Case !!

Easy Setup

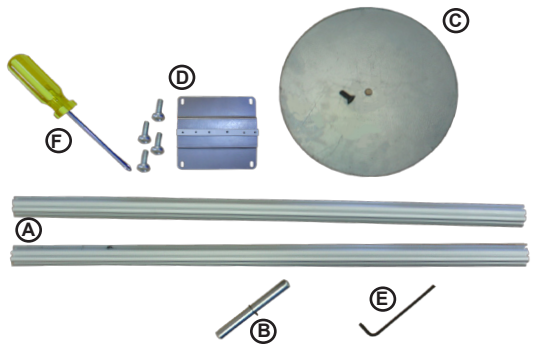

- Kit includes:**
- (A) 2 aluminum poles
 - (B) 1 pole connector
 - (C) 1 round base plate and large black bolt
 - (D) 1 monitor support bracket with 4 screws

- You'll need:**
- (E) 1 6mm allen key
 - (F) 1 phillips screwdriver

2 Sizes

IMM-60 InstaMount 60"
Pole height: 60"
Weight: 14 lbs
Case: MagnaPOP Oval Case
Base plate: 12" diameter
Monitor width: up to 24" or 26 lbs


IMM-70 InstaMount 70"
Pole height: 70"
Weight: 21 lbs
Case: Tall Expo Case
Base plate size: 15" diameter
Monitor width: up to 32" or 32 lbs



MagnaPOP Oval Case



Tall Expo Case

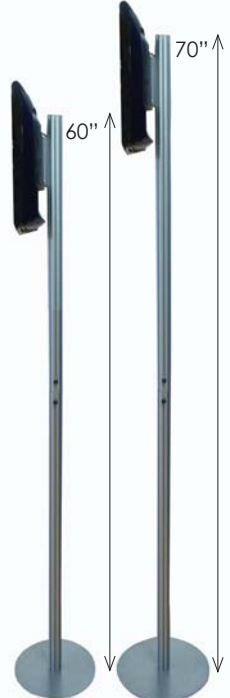

InstaMount Stand Setup Instructions



www.TradeShowJoe.com
info@tradeshowjoe.com

(866) 821-1520
Toll-Free Phone



Step 1

Insert the large black bolt into the round base plate and tighten using a 6mm allen key.




Step 2

Install the pole connector into the center of the aluminum pole.




Step 3

Connect the other aluminum pole by fitting it onto the pole connector.

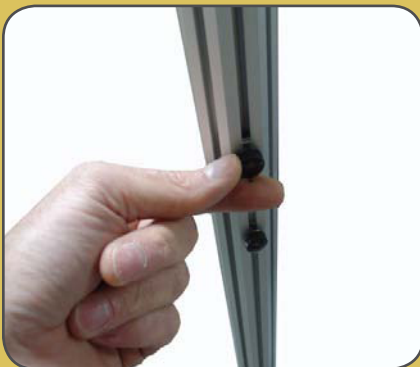

Step 4

Slide adjustable locking connector up between both pole sections. Adjust the thumbscrews to secure the top pole to the bottom pole.

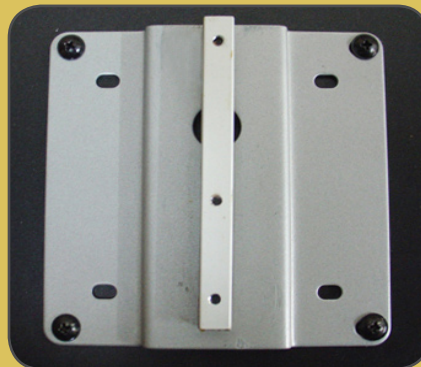

Step 5

Screw the monitor support bracket onto the back of the monitor screen.



Step 6

Position the InstaMount stand in front of the POP-UP display.



Step 7

Mount the panel with the monitor cut-out in front of the InstaMount stand.



Step 8

Slide the monitor support bracket into the aluminum pole track of the top pole.



Step 9

InstaMount setup complete.